

INNOHOME **QUESTIONS & ANSWERS**

Stove Alarm FAQ – Stove Alarm use

Question: Why did the Stove Alarm begin to signal the first time I used the hob?

Answer: When the Stove Alarm is first installed, it goes through an adjustment period, during which it adjusts to the installation environment and to the user(s)' cooking style(s). If the Stove Alarm starts to signal in a normal cooking situation, press the Alarm push-button within one minute (ie. during the pre-alarm signal). The Stove Alarm will 'learn' that this was a normal cooking situation and will adjust its heat parameters accordingly. After the initial adjustment period, the result is a Stove Alarm perfectly adjusted to your kitchen and to your way of cooking.

Q: I forgot to turn off an empty hotplate and the alarm triggered. How do I reset it?

A: Turn the hotplate off and press the Stove Alarm push-button once.

Q: How do I know that the battery is running low?

A: Similarly to a smoke detector, the Stove Alarm will emit a signal once a minute when the battery is running low.

Q: Is it important to test the Stove Alarm after its installation?

A: It is vital to test the Stove Alarm immediately after installation in order to ensure that it has been installed correctly. As with other detectors, it is also important to conduct monthly tests. Testing is easy, just press the Stove Alarm push-button down and hold it until you hear a signal.

Q: I was boiling an egg and the pot boiled dry, with the egg already starting to get brown. However, the Stove Alarm alarm was not triggered. Why is that?

A: If the Stove Alarm reacts in this situation it means that frying food at a high temperature will trigger an alarm as well. Therefore, the alarm will trigger some time later in this situation. It is good to ensure however that the sensitivity level has been set correctly: if the Stove Alarm is installed on an electric cooker, under a cooker hood that is higher than 65cm from the top of the cooker, its sensitivity level should be set manually to be more sensitive. In cookers with gas burners, the Stove Alarm can only be installed on the wall (see separate instructions).